


VW T5



The CB VW T5 can be installed on the following vehicles:
VW California, VW Transporter, VW Multivan

After 07/2003

Bike carrier specially made for Volkswagen T5 with single rear door. Easy installation with the standard delivered brackets, without drilling the vehicle.
Standard delivered with:
2 Rails Quick 128 Red, 1 Bike-Block Pro 1 and 3 Red,
1 Rack Holder.
Optional: Rail Quick 128 Red, Bike-Block Pro 2 and 4 Red for the third and fourth bike.
02093-71-

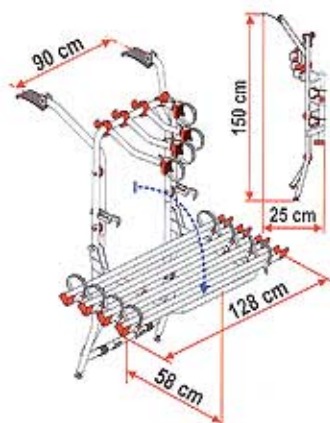


VW T4




The CB VW T5 can be installed on the following vehicles:
VW California, VW Coach, VW Caravelle, VW Multivan

After 1991

Bike carrier specially made for Volkswagen T4 with single rear door. Easy installation with the standard delivered brackets, without drilling the vehicle.
Standard delivered with:
2 Rail Quick 128 Red, 1 Bike-Block Pro 1 and 3 Red,
1 Rack Holder.
Optional:
Rail Quick 128 Red, Bike-Block Pro 2 and 4 Red for the third and fourth bike.
02093H01-

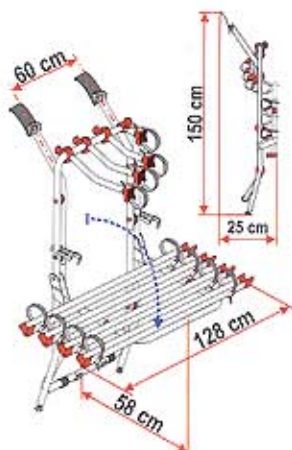




Easy installation with brackets, without drilling the vehicle

VW


VW T4 D

Bike carrier specially made for Volkswagen T4 D with double rear door. Easy installation with the standard delivered brackets, without drilling the vehicle. Standard delivered with: 2 Rail Quick C 128 Red, 1 Bike-Block Pro 1 and 2 Red, 1 Rack Holder. 02093T01-

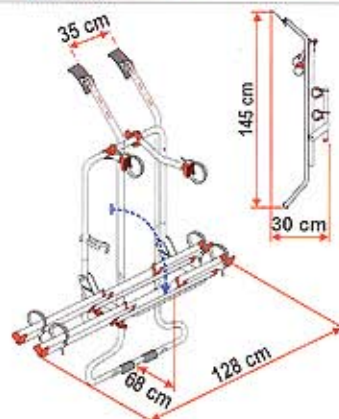

VW T5 D


Bike carrier specially made for Volkswagen T5 D with double rear door. Easy installation with the standard delivered brackets, without drilling the vehicle. Standard delivered with: 2 Rail Quick C 128 Red, 1 Bike-Block Pro 1 and 2 Red, 1 Rack Holder. 02093-79-

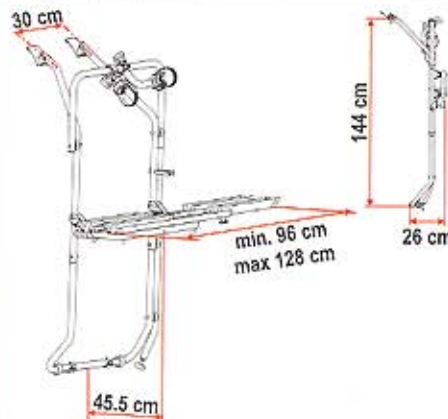

VW T3 (T25)

After 1980


Standard delivered with: 2 Rail Quick 128 Red, 1 Bike-Block Pro 1 and 3 Red, 1 Rack Holder. 02093C01-

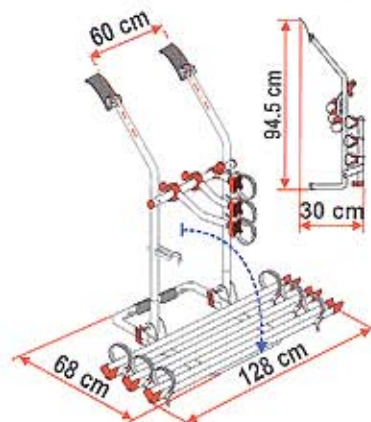

VW T2

Before 1980

Standard delivered with: 2 Rail Quick C 128 Red, 1 Bike-Block Pro 1 and 2 Red, 1 Rack Holder. 02093-63-

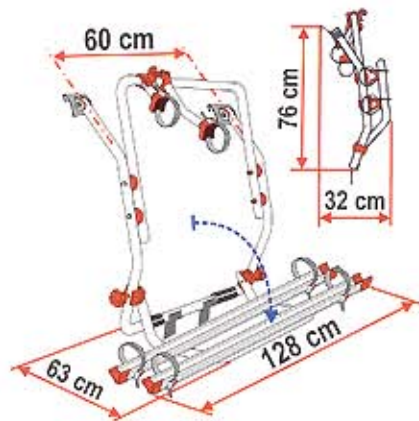

CARRY-BIKE®