


# Adapters: for every vehicle a solution


## ● Mounting rail luxe

50 0000 62 (10 x 6m)

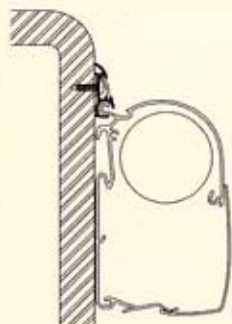


## ● Mounting rail

50 0000 40 (20 x 6m)  
50 0000 30 (20 X 3m)

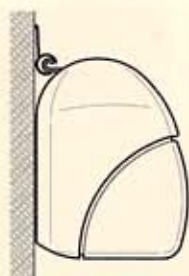


## ● Omni-Adapter

50 0000 37 3x

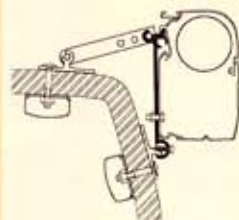


## ● Omni-Adapter Roof

50 0000 44 3x

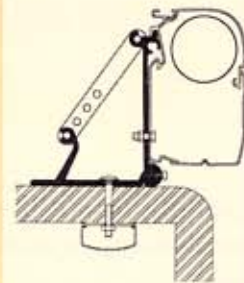


## ● Renault Master 98

50 0000 56 3x

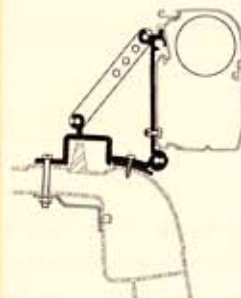


## ● Volkswagen T2

50 0000 05 3x

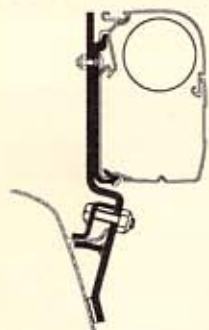

## ● Volkswagen T4

50 0000 04 2x

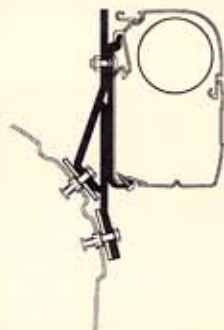


## ● Van adapter

50 0000 11 3x



## ● Ducato-Jumper-Boxer

50 0000 48 3x

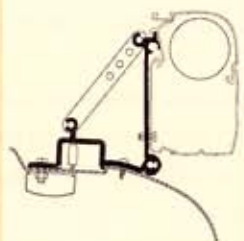


## ● VW Westfalia

50 0000 17 2x



## ● Caravan adapter

50 0000 06 3x

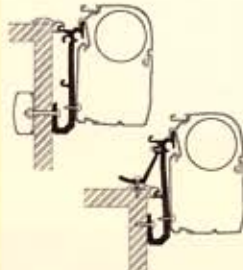


## ● Brandrup adapter

50 0000 14 2x




## ● VW T4 Lift roof

50 0000 15 2x

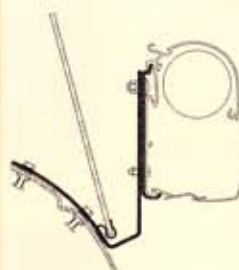


## ● Eriba Touring

50 0000 08 3x

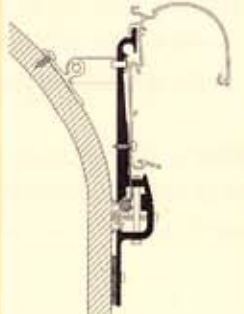


## ● Mobilvetta Blue Line

on length 50<sup>(\*\*\*\*)</sup>08  
(3m-3,50m-4m)

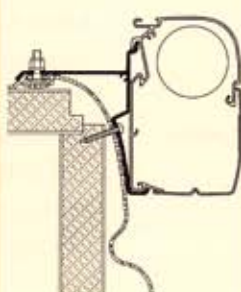


## ● Flat adapter

50 0000 51 (40cm) 5x  
50 0000 42 (75cm) 5x

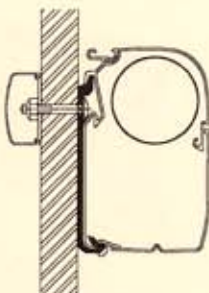


## ● Rapido serie 7-8-9

set 50 0000 63 (7&8)  
set 50 0000 46 (9)  
on length 50<sup>(\*\*\*\*)</sup>03  
(3m-3,50m-4m)

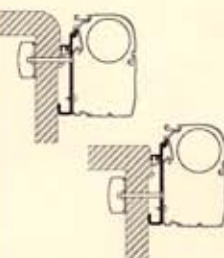

## ● Laika Ecovip.1

50 5100 41 (4m)

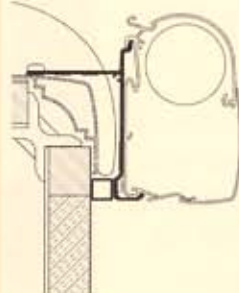

## ● High Top adapter

50 5100<sup>\*\*</sup>(3m-3,50m-4m)  
50 5100 00 (set)




## ● Pilote Explorateur

50 5100 42 (4m)  
50 5100 01 (set)



## ● Ford Transit high roof

50 5004 00 (set)

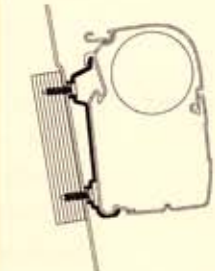

**NEW**

**NEW**