

Preferred by many motorhome manufacturers

Extremely solid and very lightweight

Attention to safety

Attractive design

• **Operation** The Omni-Step Manual is pulled out and pushed in by hand.
The Omnistep 12V is operated by means of a new design switch which combines perfectly with the interior of modern motorhomes (1).
The 12V motor meets CE and EMV standard.

• **Construction** All Omni-Steps have galvanised or aluminium frames. The step is made of anodised aluminium with safe rounded edges. For most of the steps, the side plates are in anodised aluminium as well.
For improved strength, the Omni-Step 12V Double has double profiles on both sides (2). Both current and new developments regarding our products are continuously tested. The required demands do largely surpass the European EN1646 standard! Maximim static capacity 200kg.

• **Safety** A switch for connection to a warning light in the vehicle is supplied as standard. For your safety, the Omni-Step edges are rounded and fluorescent in the dark (3). Danger of slipping is avoided because the step is in ribbed aluminium.
All 12V alu steps are now equipped with anti-slip foot boards as standard (3)! Your current 12V alu step (460 and 550/double 380, 440 and 500) can be retro fitted with the new anti-slip foot boards.

• **Options** For your safety in the dark, you have the option to equip your Omni-Step 12V with a set of LED's. One set per foot board. Suitable for 12V steps from construction date July 2003. **Art.nr. 20020000**. Not suitable for the slide-out 700.
Relay: The step is retracted when starting the engine.
Electronic: Kit to have the step operate by door contact. The step is also retracted when starting the engine.

• **Installation** The Omni-Step 12V Double 380 fits the fixation frame of older Hymer B-class motorhomes.
The **Omni-Step slide-out** (5) can be mounted onto several types of vans by using one of our **special mounting kits**:

Installation-kits for Omni-Step slide out:

20050400	Fiat Ducato, Citroën Jumper & Peugeot Boxer (large wheel dist.)
20050600	Ford Transit
20050700	Renault Master, Opel Movano, Nissan Interstar


For the **Mercedes Sprinter** a custom-made Omni-Step slide-out including the installation kit is available (see next page).



(1)



(2)

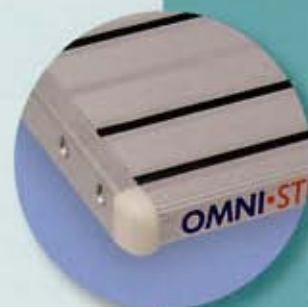

(3)



(4)



(5)