
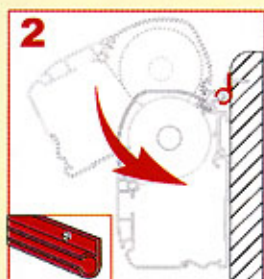


ADAPTERS


Fiamma awnings can be installed by:

1) Using the standard Adapter supplied with the awning or

2) Fixing the awning on the standard provided rails.

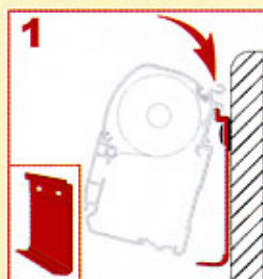

KIT AS 120

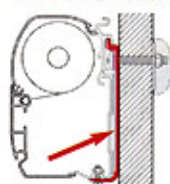


For awnings from 250cm to 350cm length

n. 2 12cm brackets
n. 1 8cm bracket
98655-391

KIT AS 400

NEW!

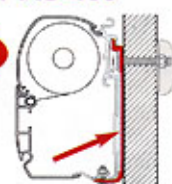

For awnings from 400cm to 600cm length


n. 2 40cm brackets
n. 1 8cm bracket
98655-390

KIT S 120 - Optional




(1 pc.)
98655-392

KIT S 400 - Optional

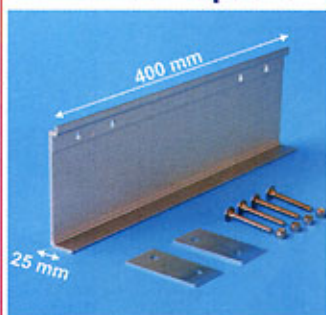


(1 pc.)
98655-381

RAIL

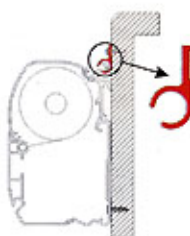

02361-01A - 300 cm
02361-01C - 400 cm

RAIL PRO

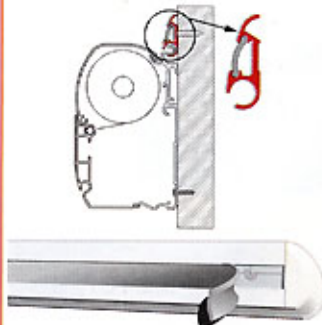

98655-386 - 300cm
98655-388 - 400cm


FIAMMASTOR

KIT VW T5 MULTIVAN - TRANSPORTER



KIT (2 pcs.)
98655-686

KIT VW T5

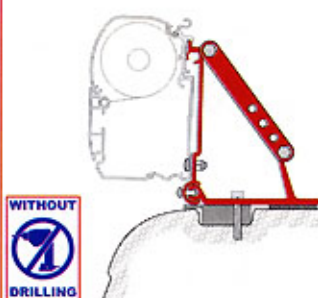

KIT (2 pcs.)
98655-293

KIT VW T4




KIT (2 pcs.)
98655-292

KIT VW T3




KIT (2 pcs.)
98655-035

KIT BR

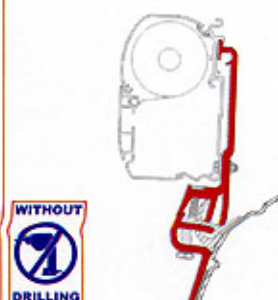


KIT (2 pcs.)
98655-470

KIT VAN

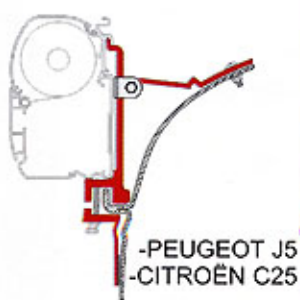


KIT (2 pcs.)
98655-017

KIT VAN

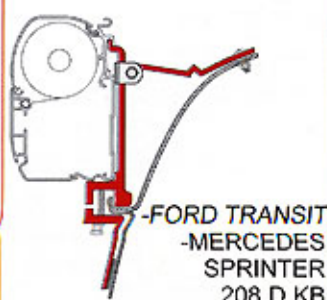

Kit (2 pcs.)
98655-017

KIT MERCEDES VITO

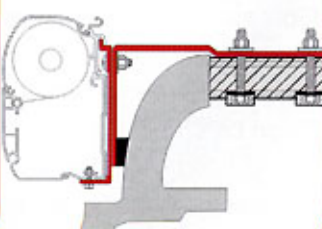

KIT (2 pcs.)
98655-284